

VISM


Evolution Scope Series

OWNER'S MANUAL

VISM Evolution Scope Series

Congratulations on the purchase of your New VISM Evolution (EVO) Series Scope! The EVO Series of Scopes give you many great high end features and various magnification ranges so you can select an EVO model that best fits your needs. Backed by a Lifetime Limited Warranty, your VISM Scope will provide you with years of reliable service. This Owner's Manual will help you understand all of the features of your new scope. Follow all instructions carefully before initial use to experience the best performance.

EVO Series Features

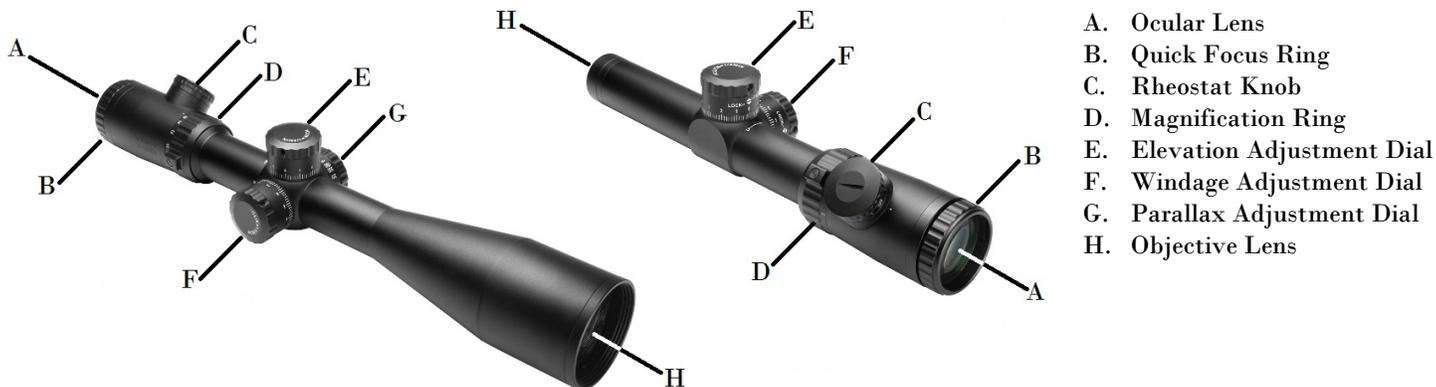

Mounting Your Scope

CAUTION: BE SURE THAT YOUR FIREARM IS UNLOADED AND POINTED IN A SAFE DIRECTION. PRACTICE SAFE FIREARMS HANDLING PROCEDURES AT ALL TIMES.

NOTE: IF YOU ARE UNFAMILIAR WITH THE PROCESS OF MOUNTING A SCOPE, IT MAY BE NECESSARY TO EMPLOY THE SERVICE OF A QUALIFIED GUNSMITH.

Choosing a proper ring type and height is essential to successfully mounting this scope to your firearm. Be sure to follow the Manufacturers Installation Instructions of the scope rings and base that you choose.

Mounting your scope as low as possible on the firearm will help to achieve optimum cheek weld and a comfortable, consistent shooting position. Use the lowest rings possible while ensuring that no part of the scope is in contact with any part of the firearm. Also, be sure that you can operate all features of the scope, and that all parts of the firearm function normally without interference from the scope.

Once you have the scope mounted in the rings (before final tightening) it is necessary to adjust the scope's position to allow for Maximum Eye Relief and reticle leveling. Slide the scope as far forward as possible in the rings. While viewing through the scope in a normal shooting position move the scope back towards your eye until a Full Field of View is achieved while ensuring that the scope will be a safe distance from your eye when the firearm recoils. Without disturbing the Eye Relief setting, aim the reticle at a plumb line. Align the vertical cross hair of the reticle with the plumb line by rotating the scope within the rings. Once you are satisfied with your scopes setting and placement, tighten the rings evenly and securely according to the Manufactures Specifications. Be sure not to over tighten the rings, as doing so can cause permanent damage to the scope.

Your VISM Scope is factory set with a Centered Reticle necessary for efficient sighting-in. If you have made any prior adjustments to the Elevation and Windage settings it will be necessary to re-center the reticle. Turn the Elevation Adjustment Dial in either direction until it comes to a complete stop. Next, turn the dial in the opposite direction, counting the number of clicks, until you have reached the limits of the adjustment range. Divide the number of clicks in half, and turn the dial that exact number of clicks back towards the center of the adjustment range. Repeat this procedure for the Windage Adjustment Dial. The reticle is now centered.

Focusing Your Scope

CAUTION: VIEWING THE SUN WITH THIS SCOPE OR ANY OTHER OPTICAL DEVICE CAN CAUSE PERMANENT INJURY TO THE EYE INCLUDING BLINDNESS

Holding the scope at the proper distance from your eye, in order to achieve a Full Field of View, the reticle should appear sharp and clear. If not, it will be necessary to adjust the focus by turning the Quick Focus Ring.



B. Quick Focus Ring

1. Make quick glances through the eyepiece at a featureless bright surface such as a white wall, or the open sky.
2. Turning the Quick Focus Ring counter-clockwise (↺) will extend the Ocular Lens outward, generally suitable for those who are far sighted. Turning the Quick Focus Ring clockwise (↻) will draw the Ocular Lens inward, generally suitable for those who are near sighted.
3. Fine tune your adjustments until the reticle appears sharp and clear. Once the Ocular Lens reaches its outer limits of adjustment, be sure not to force it as doing so will cause damage to the eyepiece.

Magnification Adjustment

The EVO Scopes have a Magnification Power selector ring located directly in front of the eyepiece. By turning this ring you can quickly and easily choose the desired magnification level. Lower levels of magnification provide you with a wider Field of View, while higher levels of magnification provide you with a closer view of your target.

CAUTION: DO NOT ATTEMPT TO LOOSEN OR REMOVE THE SLOTTED SCREW ON THE MAGNIFICATION RING. DOING SO CAN RELEASE THE INTERNAL NITROGEN GAS CAUSING DAMAGE TO THE SCOPE.

Side Parallax Adjustment Dial

On a few select EVO scope models will have a side Parallax Adjustment Dial feature. If your scope is equipped with a side Parallax Adjustment feature, there will be a third turret dial on the left side of the scope body, along with the elevation and windage turrets. The Parallax Adjustment Dial will fine tune the parallax alignment of the scope, so that you can properly adjust the parallax of your reticle to the target image in the scope.

If you do not have the parallax adjust properly, if you were to move your eye around the ocular lens, the reticle will seem to move in relations to the target image.

Have the scope on a stable platform, while viewing your target through the scope. Adjust the Parallax Adjustment Dial in either direction until the reticle stays perfectly still on your target, if you were to move your eye around the ocular lens while viewing through the scope. With the reticle properly adjusted, the reticle should remain still on your target (as if the reticle was painted onto the target). Adjusting the parallax so that the reticle is stationary against the target image will help the shooter make a more precise shot at longer distances and help with shooting a more consistent and tighter shot groupings.



G. Parallax Adjustment Dial

Windage and Elevation Adjustment Dials

Your scope is equipped with Elevation and Windage Adjustment Dials, which change your scopes point of aim relative to the bullet's point of impact on a target for a specific range. The Elevation Adjustment Dial is located on top of the Turret Body, and is responsible for the up and down movement of the reticle. The Windage Adjustment Dial is located on the right side of the Turret Body, and is responsible for the left and right movement of the of the reticle.

The EVO series of scopes are equipped with Lockable Adjustment Dials. When the bottom edge of the Adjustment Dial is flush with the scope body, it is in the Locked position. When the bottom edge of the Adjustment Dial is about $\frac{1}{8}$ " away from the scope body, it is in the Unlocked position.



E. Elevation Adjustment Dial
F. Windage Adjustment Dial

To Unlock the Adjustment Dials, you only have to gently pull the Adjustment Dial away from the scope body. You will feel the dial move outwardly by approximately $\frac{1}{8}$ " away from the scope body when it is in the Unlocked position. You will now be able to rotate the Adjustment Dials in either direction to adjust the reticle. When you have finished making your adjustments to the reticle, you can then press the Adjustment Dials towards the scope body to Lock the Adjustment Dial in place. You will feel the Adjustment Dial move inwards flush with the scope body.

On the surface of the scope body next to each Adjustment Dials you will notice that there are arrows indicating direction of movement.

Turning the Elevation Adjustment Dial counter-clockwise (↺) will shift the bullet point of impact up (↑).
Turning the Elevation Adjustment Dial clockwise (↻) will shift the bullet point of impact down (↓).

Turning the Windage Adjustment Dial counter-clockwise (↺) will shift the bullet point of impact right (⇒).
Turning the Elevation Adjustment Dial clockwise (↻) will shift the bullet point of impact left (⇐).

The Elevation and Windage Adjustment Dials also feature Audible and Tactile Clicks which not only can you see and hear the adjustments, but you can feel them as well. Depending on which EVO scope you have, each Click moves the reticle point of aim a certain amount MOA* at 100 Yards. See the chart

below to see the amount of movement of each click of the Adjustment Dials will move the reticle for your specific EVO scope model at various distances.

Elevation/Windage movement per click					
Magnification Model	100 yards	200 yards	300 yards	400 yards	500 yards
6-24 X 50mm	1/8 MOA	1/4 MOA	3/8 MOA	1/2 MOA	5/8 MOA
4 – 16 X 50mm	1/8 MOA	1/4 MOA	3/8 MOA	1/2 MOA	5/8 MOA
2.5 – 10 X 50mm	1/4 MOA	1/2 MOA	3/4 MOA	1 MOA	1 1/4 MOA
1.1 – 4 X 24mm	1/2 MOA	1 MOA	1 1/2 MOA	2 MOA	2 1/2 MOA

*1 MOA = 1.047 Inches at 100 Yards

The Adjustment Dials can be re-indexed after you get the scope zeroed. You can re-index the Dial's "0" markings to the indicator marks on the scope body. On the top edge knurling of the Dials, you'll find three 2mm Allen Set Screws. If you loosen all three set screws, you will be able to rotate the outer Dial, without moving the internal reticle adjustment mechanism. Once you have the outer Dial's "0" markings indexed to the markings on the scope body, you can re-tighten the three Allen set screws to tighten the outer Dial to the internal reticle adjustment mechanism.

Zeroing your Scope

After you have completed installation of your scope it will be necessary to adjust the scopes point of aim to match the rifles point of impact on a target. This can be accomplished using several methods, but we recommend the use of a Bore Sighting Device to save time and ammunition. Using a Bore Sighting Device will ensure that your shots land "on paper". Follow the Manufacturer's Instructions for the Bore Sighting Device that you choose in order to achieve the best results. You are now ready to finalize your Zero.

CAUTION: ALWAYS BE SURE TO REMOVE THE BORE SIGHTING DEVICE BEFORE SHOOTING LIVE AMMUNITION. FAILURE TO DO SO CAN CAUSE DAMAGE TO YOUR FIREARM OR INJURY TO YOURSELF AND THOSE AROUND YOU.

CAUTION: WHEN OPERATING ANY TYPE OF FIREARM ALWAYS USE PROPER EYE AND EAR PROTECTION. BE SURE TO USE YOUR FIREARM IN AN AREA THAT IS PERMISSIBLE UNDER LOCAL, STATE, AND FEDERAL LAW.

Bore Sighting alone is not sufficient enough to ensure and accurate Zero. You must shoot your firearm at the range in order to confirm an accurate Zero. Follow these steps to fine tune your scope adjustments:


1. Secure your firearm using a steady platform such as a rifle bench rest or sand bags.
2. Fire 3 to 5 carefully aimed shots at a target that is set to your desired Zeroing distance (100 yards is recommended).
3. Observe where the bullet grouping have struck the target and make adjustments to the Elevation and Windage settings as necessary until your point of aim matches your point of impact.
4. Continue with this process until you have achieved your desired level of accuracy.
5. Your scope is now Zeroed to your firearm at the distance that you have chosen.

It is important to remember that many factors can affect the accuracy of your scopes zero including temperature, humidity, elevation, distance, angle, and other conditions. Changing ammunition brands can affect accuracy as well.

Battery Installation

Your Illuminated Model EVO Series Scope comes with a battery pre-installed from the factory. To replace the battery follow these simple steps:

1. The Battery Compartment is located within the Rheostat Dial on top of the Ocular Lens Housing.
2. On top of the Rheostat Dial you will notice a thin Battery Cap. To remove this cap grasp it firmly with one hand, and twist the cap counter-clockwise (↺) while holding the lower Rheostat Dial firmly in place with the other hand.
3. Remove the old battery, and dispose of it properly. Replace it with a new 3 volt Lithium Battery Type CR2032 only. Place the Battery into the Battery compartment with the Positive “+” terminal facing out. Place the battery cap back on top of the Rheostat Dial. Twist the battery cap clockwise (↻) back onto the Rheostat Dial and hand tighten. Avoid using tools (such as pliers) to perform this procedure as this may cause damage to the unit.

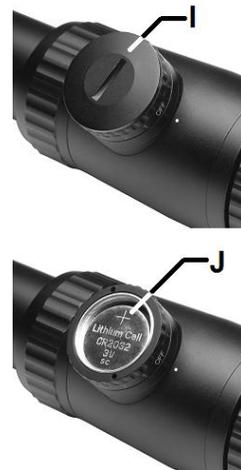

I. Battery Cap
J. CR2032 Battery

Illuminated Reticle

Your EVO Series Scope is equipped with a Glass Etched Reticle that can be illuminated in 2 different colors (Blue or Green) for use when exterior lighting conditions are less than optimal. A Glass Etched Reticle has a finer detailed reticle and is more durable than your typical wire reticle used in the majority of other scopes.



C. Rheostat Knob

The Rheostat Dial is oriented at a 45 degree angle from the scope centerline on ocular lens housing, to provide the shooter an unobstructed view of the elevation turret markings. Control of the illumination is achieved by simply rotating the Rheostat Dial in one direction or the other.

If you look closely at the side of the Dial you will notice a series of numbers. “0” represents the Off position. If you turn the Dial in either direction the reticle will illuminate blue or green (depending upon the direction that it is turned). Each illumination color can be set to 5 levels of intensity, “1” being the dimmest and “5” being the brightest. Adjust the brightness level as needed in accordance with the surrounding conditions. The illumination will increase reticle visibility especially during dawn and dusk. This illuminated scope is not intended for use in total darkness. When the illumination is turned off the reticle will appear as normal Black Reticle. Be sure that the Rheostat Dial is set to the “0” position when not in use to preserve battery life.

Care and Maintenance

Your VISM EVO Series Scope is shock proof, fog proof, and waterproof. However, you should never try to take it apart or clean it internally. The exposed optical lens surfaces will perform their best if they are routinely cleaned with a lens brush or a lens cloth. For a deep cleaning, you can also use high grade camera lens paper and camera lens cleaning solutions. Never use any other type of materials or solvents other than those designed specifically for optical lenses to avoid damaging your scope. Clean the outer portion of the lens cavity first with cotton swabs, clearing as much debris and dust as possible. Then, gently clean the lenses using a circular motion starting in the center and ending at the edges. Do not rub the lenses continually; simply wipe in short circular patterns. Maintain the exterior surfaces of the scope by removing dirt or sand by using a soft brush or a soft, dry cloth. You can also use a silicone treated cloth to restore luster and protect the scope against corrosion. Be careful not to touch any of the lenses with the silicone cloth. It is not necessary to lubricate any part of the scope as all of the moving parts, such as the turrets and the fast focus eyepiece, are permanently lubricated. When not in use, always store your scope in a dry place with the lens caps on to prevent scratches to the lenses.

IF YOU ARE UNFAMILIAR WITH ANY OF THE PROCEDURES IN THIS MANUAL, ALWAYS SEEK THE HELP OF A QUALIFIED PROFESSIONAL TO AVOID DAMAGE TO YOUR SCOPE AND YOUR FIREARM.

VISM EVOLUTION Series Scope Specifications

ITEM #	RETICLE	COLOR	MAGNIFICATION	TUBE DIA.	OBJECTIVE DIA. (mm)	FOV (FEET @ 100 YARDS)	EYE RELIEF (in)	EXIT PUPIL (mm)	NET WEIGHT (oz.)	LENGTH (in)	CLICK VALUE
VEVOFD11424G	DOT	BLACK	1.1 - 4X	30 mm	24 mm	98.3 - 27.2	3.7 - 3.3	21.8 - 6	16.5	10	½ MOA
VEVOFM11424G	MIL-DOT										
VEVOFP11424G	P4 SNIPER										
VEVOFD251050G	DOT	BLACK	2.5 - 10X	30 mm	50 mm	43.2 - 10.8	3.3 - 3.2	22.4 - 5.6	25.2	14.8	¼ MOA
VEVOFM251050G	MIL-DOT										
VEVOFP251050G	P4 SNIPER										
VEVOFD41650G	DOT	BLACK	4 - 16X	30 mm	50 mm	27.2 - 6.8	4.8 - 3.3	12.5 - 3.1	25.3	14.2	⅓ MOA
VEVOFM41650G	MIL-DOT										
VEVOFP41650G	P4 SNIPER										
VEVOFD62450G	DOT	BLACK	6 - 24X	30 mm	50 mm	18.0 - 4.5	3.5 - 3.3	8.3 - 2.1	25.2	15.4	⅓ MOA
VEVOFM62450G	MIL-DOT										
VEVOFP62450G	P4 SNIPER										

VISM

FOR TECHNICAL ASSISTANCE

CALL 1-866-627-8278